

Eagle•Ranger

Pocsag

USER MANUAL

Standby mode display with alarm turned on.

At the designated time of alarm, the pager will give off an alert and display "ALARM". The alarm icon will blink indicating it is turned on.



5. Attentions

- * Avoid humidity, high temperature, magnetic fields and fierce bumping.
- * Please send to service center for repair.
- * Do not attempt to open the pager for repair.

A. THIS EQUIPMENT IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D; CLASS II, DIVISION 2, GROUPS F AND G OR NON-HAZARDOUS LOCATIONS ONLY.

B. WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

C. WARNING - EXPLOSION HAZARD - DO NOT REPLACE BATTERY UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

4.7. Date setting


4.8. Alert setting

4.9. Audio alert setting

4.10. Alarm setting

5. Attentions

 1. External View

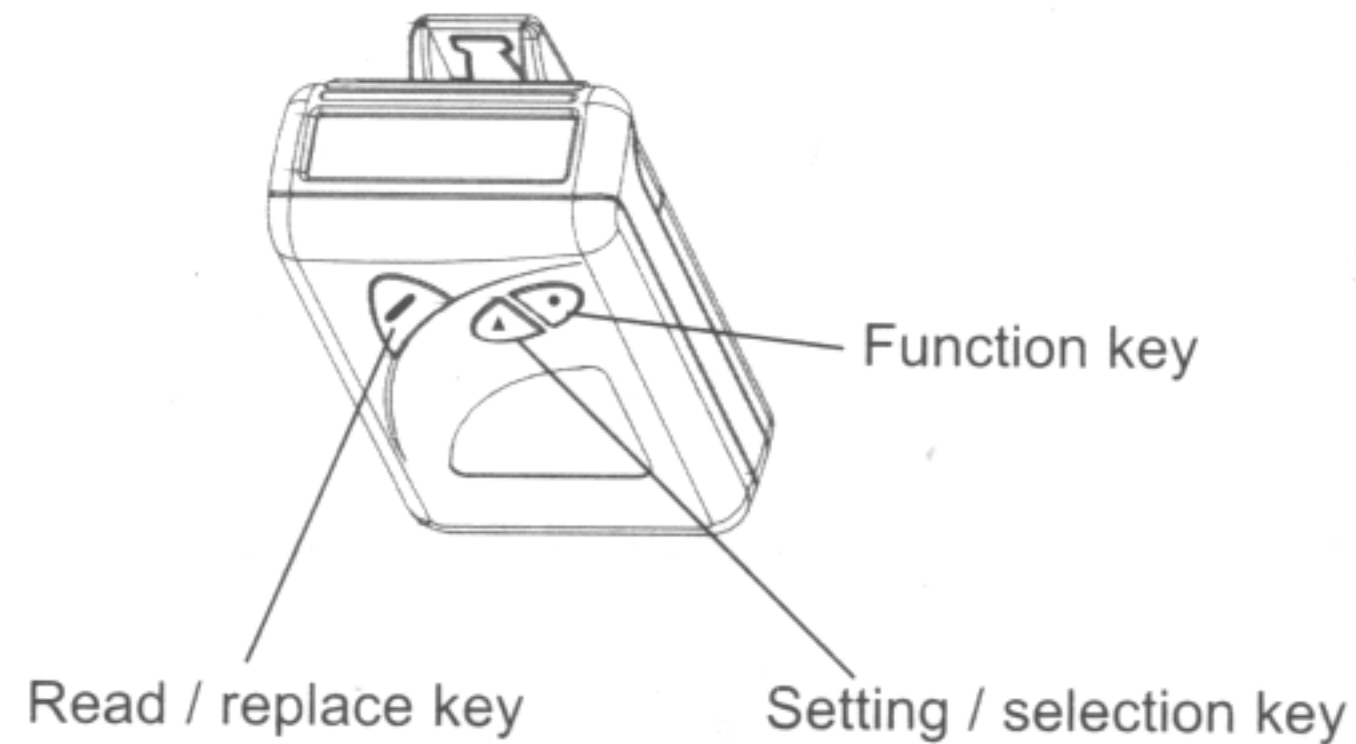

2. Features and Icon Definitions

(a) Features

- * 12 audio alerts
- * Vibration alert
- * 3 alarm settings
- * 4 address codes
- * 15 message memory protection / 20 total
- * 18 characters / message
- * Manual frequency and address code programming
- * Low battery indication
- * Duplicate and unread message indication
- * Message full indication

(b) Icon Definitions


- * Menu indication icons

 Sound alert mode is on


 Mute / vibration mode is on

 Alarm is on

- * Message status display icons

 Message serial number and resource indication icon

 Message protection / lock icon

 Message continued icon

 Duplicate message icon

* Function selection icons

 Time setting

 Sound alert setting

 Mute / vibration mode setting

 Alarm setting

 Message deletion

* Other display icons

 
 Low battery warning

 Blinking when out of receiving area

3. Turning on the pager

* After installing the battery, the pager will give out an audio or vibration alert. Time and date will be displayed on the screen.

* Turn on the pager to display:

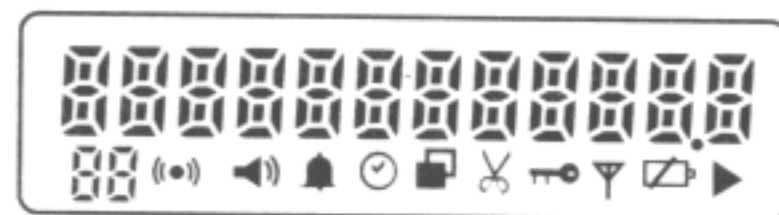

- * Standby mode display while the pager is on sound alert.



 
- * Standby mode display while the pager is on vibration alert.



Now your pager is in standby mode and can receive

messages at any time.

- * Standby mode display while the pager is turned off:

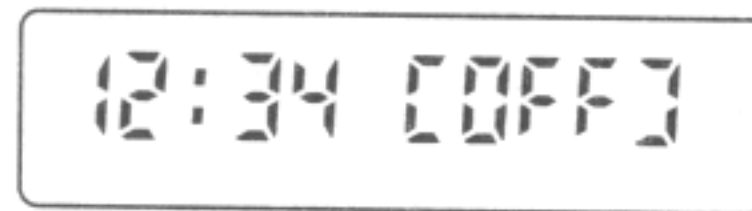

To turn off the pager, select the "PAGER OFF?" function. Then press the setting / selection key [▲] to turn off the pager.

4. Various functions

In standby mode, press the function key [●] to start function selection. Press the function key [●] repeatedly until desired function is displayed on the menu. Then press the setting / selection key [▲] to confirm that function.

Note: If you want to exit function selection without any changes, press the read / replace key [■]. The pager will automatically return to the standby mode display in 8 seconds, if no keys are pressed.

4.1. Receive and read messages

* Press the read / replace key [■] to read messages. If there's no messages stored in the pager, "NO PAGES" will be displayed.



* When the pager has received messages, the number of unread messages will be displayed as follows:



This display indicates 2 unread messages. An unread message alert will remind you of unread messages.

 
The number at the bottom left corner shows the numbers of received messages.

* Press the read/replace key to display the message.



* The first part of the message [received message: 861 5790234, time received: 12:34 PM on March 27.]

The number at the bottom left corner shows it's the 8th message. Press the read/replace key [] again to display the time and date of the message was received

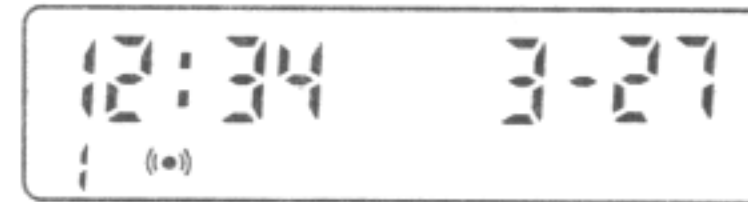

The number at the bottom left corner shows the 1st address code.

If you press the read/replace key [] and TONE ONLY is displayed, it means the caller did not leave a message.

 


- * Press the setting / selection key [▲] to read the next message.
- * At any time when you are reading messages, press the function key [●] to return to standby mode. Your pager can automatically store received messages along with their time and date. When stored memory is full, a "MEMORY FULL" indication will be displayed in standby mode. Receiving of any new message will lead to

permanent deletion of the oldest and unlock message. In a "MEMORY FULL" condition, when a new message is received, the oldest unlocked message in memory is automatically deleted.



If the pager is full of unread messages and one unread message has been deleted by a new received message, an "OVERFLOW" indication will be displayed on the pager.

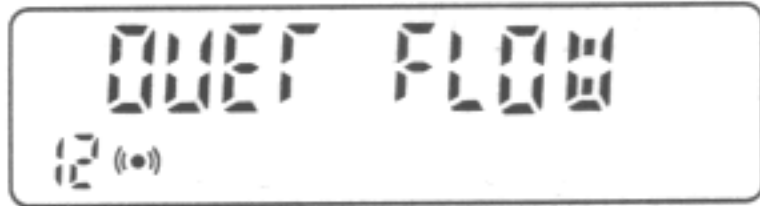

If the pager receives a duplicate message repeatedly. A duplicate message icon will be displayed to show that the message is a duplicate one. Under such a circumstance, the receiving time of the message will be updated to the latest. If it's the same message from different resources, the two messages will not be regarded as the duplicate.

* The number at the bottom left corner shows the number of received messages.

4.2. Message protection and unlock

You can "lock" or "protect" a maximum of 15 messages from being deleted by the new message when memory overflows.

*In order to lock or protect a message, press the function key [●] while reading the message. When "PROTECT?" emerges on the display, press the setting / selection key [▲] to lock the message. The lock icon shows that the message has been locked.



* In order to unlock a message, press the function key [●] first, then press the setting / selection key [▲] to unlock the message while reading the message.



 
Note: "FULL" indication will be displayed when you press the setting / selection key [▲] to protect one more message while already having 15 messages locked. Unless you release one locked message first, the message cannot be locked.



4.3. Delete messages

The pager has two ways to delete messages:

- 1) Select " CLEAR ALL?" function to delete all read and unlocked messages.
- 2) Select " DELETE", the selective deleting function, to delete some read messages.

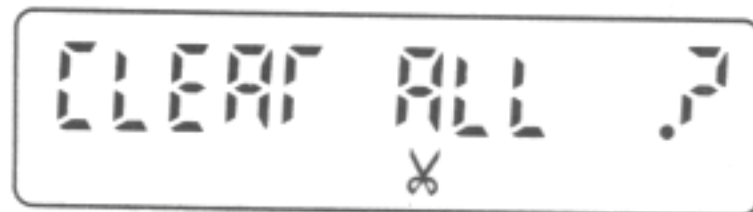

- * Press the setting / selection key [▲] to confirm all unlocked read messages will be deleted.

Note: Under the following circumstances, "CLEAR ALL?" function will not be displayed in the function selection items:

- 1) Under the circumstance of no message stored;
- 2) Under the circumstance of all messages unread;
- 3) Under the circumstance of all messages read and locked.

4.4. Messages deletion selectively

* In order to selectively delete messages, press the function key [●] twice while reading unlocked messages. The "DELETE?" indication will be displayed.



* Press the setting / selection key [▲] to confirm the selective deletion.

4.5. Turning-off the pager

 
* Press the function key [●] to display:



* Press the setting key to enter OFF mode. In this mode, the pager cannot receive messages.

4.6. Time setting

* Press the function Key [●] to display:

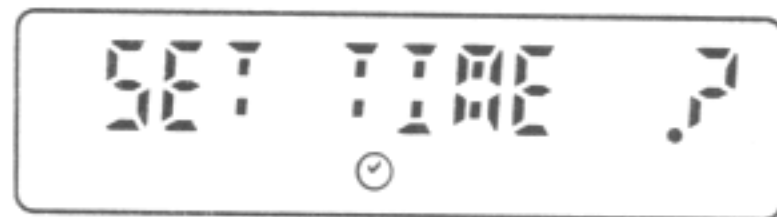

* Press the setting / selection key [▲] to enter the time setting mode.

1) press the setting / selection key [▲] to move from one blinking position to another. The order is : hour--> minute-->A or P->selecting time display mode of 12 hour or 24 hour.

2) Press the function key [●] to adjust the digit to the correct time.

* Repeat steps 1 and 2 in every position to adjust to correct time.

* Press the read / replace key [■] at any time to confirm your setting.



4.7. Date setting

* Press the function key [●] to display:



* Press the setting/selection key [▲] to enter the date setting mode.

* Press the setting / selection key [▲] to move from one blinking position to another. The order is :
[day-month-year].

* Press the function key [●] to adjust the digit in every

position to correct date.

* Repeat the above steps in every position to adjust to correct date.

* Press the read / replace key [■] at any time to confirm your setting.

4.8. Alert setting

* Press the function key [●] to display:



In the "SET ALERT" function, you can select the

following 3 kinds of alerts:

- 1) Audio alert - Press the setting / selection key [▲] to set audio alert; or press the function key [●] to enter next option.



- 2) Vibration alert - Press the setting / selection key [▲] to set vibration alert; or press function key [●] to enter next option.



- 3) Mute alert - In this mode, the pager will receive messages with mute alert. Press the setting / selection key [▲] to confirm the setting or press the function key [●] to enter next option.



4.9. Audio alert setting

* Press the function key [●] to display:



"SET AUDIO?" function: you can select one alert from the 5 tone alerts or 7 music alerts for receiving messages or turning on the pager.

* Press the setting / selection key [▲] .

* Press the function key [●] until you get your desired alert.

* Press the setting / selection key [▲] to confirm your selection.



4.10. Alarm setting

* Press the function key [●] to display:



* Press the setting / selection key [▲] to enter the alarm setting mode.

- * Press the function key [●] to select from alarm 1, 2 or 3.



- * Press the setting / selection key [▲] to confirm your selection.
- * Press the function key [●] to select turning the alarm ON or OFF.
- * Press the setting / selection key [▲] to move to the position needed changing, then press the function key [●] to adjust the alarm time.

- * Repeat the above steps in every position to adjust the alarm time.

- * Press the read / replace key [■] to confirm your alarm setting.

When the alarm icon shows on the display in standby mode or OFF mode, it indicates that an alarm has been turned on. When all alarms are turned off. The alarm icon will not be displayed.



CONTENT

1. External view and description of keys
2. Features and Icon Definitions
3. Turning on the pager
4. Various functions
 - 4.1. Receive and read messages
 - 4.2. Message protection and unlock
 - 4.3. Delete messages
 - 4.4. Message deletion selectively
 - 4.5. Turning-off the pager
 - 4.6. Time setting